

Rear Wheel Removal

1. Place the motorcycle on its center stand.
2. Remove the rear brake adjusting nut (3) and brake rod (1) from the brake arm (2).
3. Loosen the drive chain adjuster lock nuts (4) and adjusting nut (5).
4. Remove the axle nut (6) and pull out the axle.
5. Push the wheel forward and remove the chain from the rear sprocket. Pull out the wheel from the swingarm.
6. To install, reverse the removal procedure.

NOTE:

- * **Make sure the tang (1) on the swingarm is located in the slot (2) in the brake panel (3).**
- * **Adjust the right and left chain adjusters so the same index mark on both sides.**
- * **Adjust the brake and drive chain.**

Axle nut torque: 80—100 N·m (8.0—10.0 kg, 58—72 lbs-f)

