

To replace the main fuse:

Remove the left side cover and open the fuse holder cover.

Loosen the screws and discard the old fuse.

Install the new fuse and tighten the screws securely.

To replace fuse in the fuse box:

Remove the fuse box cover and the blown fuse. Install a new fuse and the fuse box cover.

(4) Blown fuse

