

**NOTE: Drain the coolant into a clean container for reuse. Scheduled coolant replacement is every 18,000 km (10,800 miles).**

Drain the coolant from the radiator by removing the drain bolts on the frame (1) and engine (2).

Lean the motorcycle to the right to aid in draining of the coolant. Remove the two bolts attaching the reserve tank and drain coolant from the tank.

Fill the radiator with coolant up to the filler neck.

Install the radiator cap.

