

Fill the reserve tank up to the UPPER level mark (3).

CAPACITY: 1,700 cc approx.

Radiator: 1,400 cc

Reserve tank: 300 cc

Bleed air from the system as follows:

- (1) Start the engine and warm it up to the operating temperature.
- (2) Check that there are no air bubbles in the coolant near the filler neck and the level stabilizes.
- (3) Stop the engine and fill the radiator up to the filler neck.
- (4) Check the level in the reserve tank and, if necessary, fill to the UPPER level mark.

NOTE: After filling, check for leaks.

