


Passenger's Helmet Holder


The passenger's helmet holder is located below the seat. Remove the seat. Hang the helmet on the holder hook (4). Install the seat. Turn the key counterclockwise to lock the seat then remove the key.

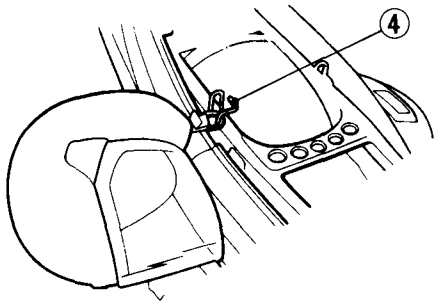

(4) Holder hook

SEAT

To remove the seat (1), insert the ignition key (2) into the helmet holder (3), turn it clockwise and pull the seat lock lever (4) downward. Pull the seat back and up.

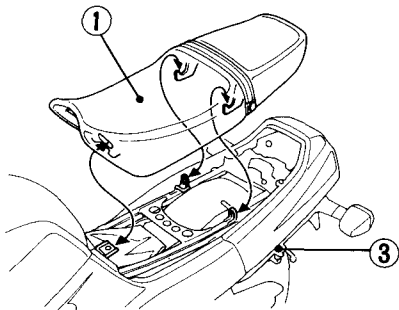

(1) Seat

(3) Helmet holder