


Installation Notes:

Position the front wheel between the fork legs.

CAUTION:

- * **When installing the wheel, fit the left brake disc carefully between the brake pads to avoid damaging the pads.**

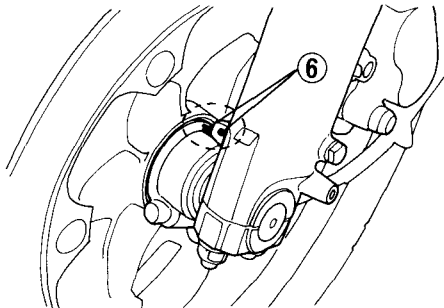

(6) Tangs

Position the tang on the speedometer gearbox against the tang (6) on the right fork leg.

Install the right axle holder facing the arrow mark to the front and tighten the forward nut first and the rear nut to the specified torques.

Axle holder nut:

22 N·m (2.2 kg·m, 16 ft·lb).

Install the left axle holder facing the arrow mark to the front.

Fit the right caliper over the disc taking care not to damage the brake pads. Install the caliper mounting bolts and tighten to:

27 N·m (2.7 kg·m, 19 ft·lb).

⚠ WARNING

- * **If a torque wrench was not used for installation, see your authorized Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.**