


The immobilizer system has such a function that keeps the immobilizer system (HISS) indicator blinking at 2 second intervals for 24 hours. This blinking function can be turned on or off.


To alter the blinking function:

1. Turn the ignition switch ON.
2. While pressing the button (1), simultaneously turn the ignition switch OFF when the display function mode is odometer.

The immobilizer system (HISS) indicator (2) instantly flash, the function is enabled.

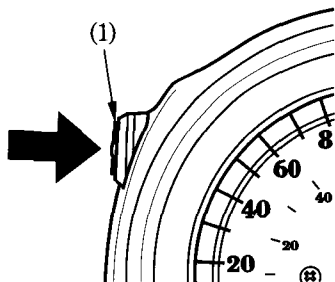

(1) Odometer/Tripmeter/Digital clock select and reset button

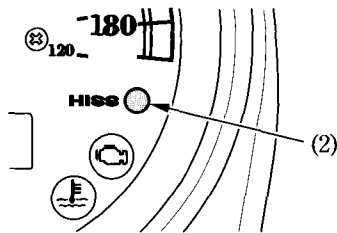

(2) Immobilizer system (HISS) indicator