

## Engine Oil & Filter


### *Install a New Oil Filter:*

5. Remove the oil filter (3) with a filter wrench and let the remaining oil drain out. Discard the oil filter in an approved manner (page 145).
6. Pour the drained oil into a suitable container and dispose of it in an approved manner (page 145).

### **NOTICE**

*Improper disposal of drained fluids is harmful to the environment.*

LEFT REAR, UNDER ENGINE

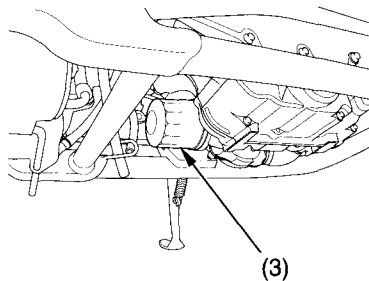

(3) oil filter

(cont'd)