

## SIDE COVER

The right side cover must be removed to inspect fuse. The left side cover must be removed to access the tool kit and owner's manual.

The right and left side covers can be removed in the same manner.


### Removal:

1. Pull the side cover prongs (1) out of the rubber grommets (2).
2. Remove the side cover (3).


### Installation:

- Align the side cover prongs with the rubber grommets. Press the side cover into position.

### Right side

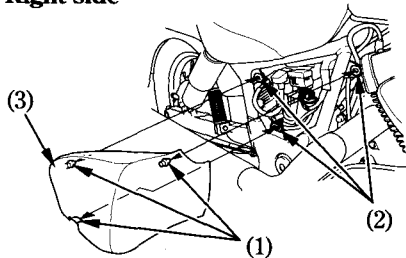

### Left side

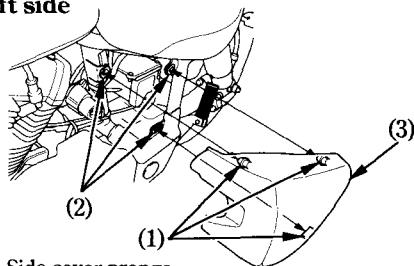

- (1) Side cover prongs
- (2) Rubber grommets
- (3) Side covers