



Rear Wheel Removal

1. Raise the rear wheel off the ground by placing a support block under the engine.
2. Remove the right footpeg (1) by removing two bolts (2) and nut (3).
3. Remove the muffler bracket bolts (4) and nuts(5).

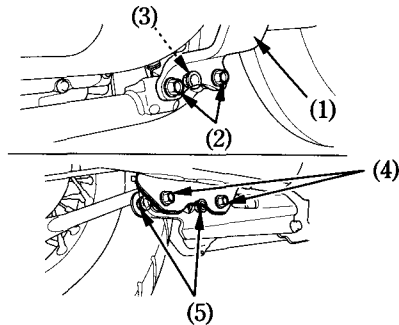

- (1) Right foot peg
- (2) Footpeg bolts
- (3) Footpeg nuts
- (4) Muffler bracket bolts
- (5) Muffler bracket nuts

4. Remove the exhaust pipe joint nuts (6).
5. Remove the right muffler.

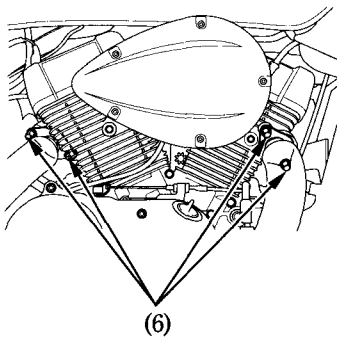

- (6) Exhaust pipe joint nuts