


Spark Plugs

- Using the spark plug wrench (2), remove the spark plugs.

LEFT SIDE

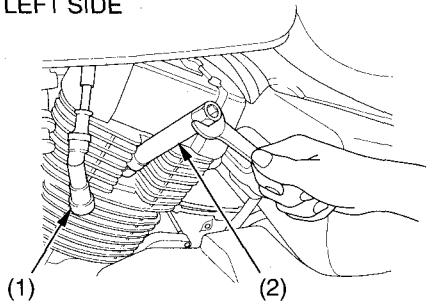

- (1) spark plug cap
(2) spark plug wrench

- Inspect the electrodes and center porcelain for deposits, corrosion, or carbon fouling. If the corrosion or deposits are heavy, replace the plug. Clean a carbon or wet-fouled plug with a plug cleaner, if available, or a wire brush.
- Check the spark plug gap (3) of each new plug, using a wire-type feeler gauge. If adjustment is necessary, bend the side electrode (4) carefully. The gap should be:
0.03–0.04 in (0.8–0.9 mm)

(cont'd)