


# If You Have a Flat Tire

5. Remove the exhaust pipe joint nuts (6).
6. Remove the right muffler.

## RIGHT SIDE

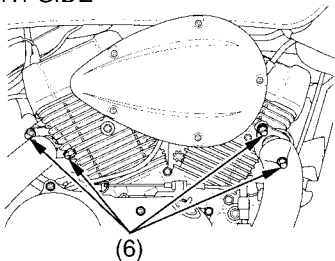


(6) exhaust pipe joint nuts

7. Remove the rear brake adjusting nut (7), disconnect the brake rod (8) from the brake arm (9) by pushing down on the rear brake pedal.
8. Disconnect the brake stopper arm (10) from the brake panel by removing the

- cotter pin (11), stopper arm nut (12), washer and rubber grommet.
9. Remove the axle holding bolt (13).

## RIGHT REAR

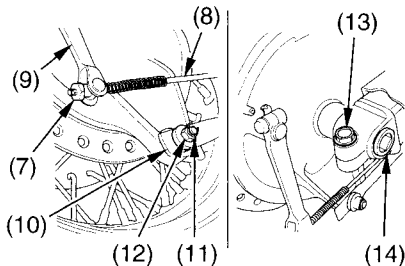

- |                         |                        |
|-------------------------|------------------------|
| (7) brake adjusting nut | (12) stopper arm nut   |
| (8) brake rod           | (13) axle holding bolt |
| (9) brake arm           | (14) rear axle shaft   |
| (10) brake stopper arm  |                        |
| (11) cotter pin         |                        |