

(Ref.No.) Description	Function
(8) Low oil pressure indicator (red)	<p>Lights when the engine oil pressure is below normal operating range. Should light when ignition switch is ON and engine is not running. Should go out when the engine starts, except for occasional flickering at or near idling speed when engine is warm.</p> <p>NOTICE</p> <p>Running the engine with insufficient oil pressure may cause serious engine damage.</p>
(9) Neutral indicator (green)	Lights when the transmission is in neutral.
(10) Odometer/Tripmeter select and reset button	This button is used to reset the tripmeter or to select the tripmeter or odometer (page 16).
(11) Fuel indicator (orange)	<p>Lights when there is only few fuel left in the fuel tank. The amount of fuel left in the tank when lights and with the vehicle set upright is approximately:</p> <p>3.5 l (0.92 US gal , 0.77 Imp gal)</p> <p>Should also light for a few seconds and then go off when the ignition switch is turned ON.</p>