


(Ref.No.) Description	Function
(1) Speedometer	Shows riding speed. This shows your speed in kilometers per hour (km/h) and/or miles per hour (mph) depending on the type.
(2) Turn signal indicator (green)	Flashes when the either turn signal operates. Should also light for a few seconds and then go off when the ignition switch is turned ON.
(3) Immobilizer system (HISS) indicator (red)	This indicator lights for a few seconds when the ignition switch is turned ON and the engine stop switch is at  (RUN). It will then go off if the properly-coded key has been inserted. If an improperly-coded key has been inserted, the indicator will remain on and the engine will not start (page 48). When the blinking function of this indicator is valid and the ignition switch is OFF, it keeps blinking for 24 hours (page 49).