

(Ref.No.) Description	Function
(4) High beam indicator (blue)	Lights when the headlight is on high beam. Should also light for a few seconds and then go off when the ignition switch is turned ON.
(5) High coolant temperature indicator (red)	<p>Lights when the coolant is over the specified temperature. Should also lights for a few seconds and then go off when the ignition switch is turned ON. If the indicator goes on while riding, stop the engine and check the reserve tank coolant level. Read pages 34 – 35 and do not ride the motorcycle until the problem has been corrected.</p> <p>NOTICE</p> <p>Exceeding maximum running temperature may cause serious engine damage.</p>
(6) Low fuel indicator (amber)	<p>Lights when there is only few fuel left in the fuel tank. The amount of fuel left in the tank when lights and with the vehicle set upright is approximately:</p> <p>2.5 l (0.66 US gal , 0.55 Imp gal)</p> <p>Should also light for a few seconds and then go off when the ignition switch is turned ON.</p>