

(Ref.No.) Description	Function
(7) Odometer/Tripmeter/ Digital clock display	Shows odometer, tripmeter and digital clock. This display shows the initial display (page 21).
Odometer	Shows the total miles (For E type) or kilometers (Except E type) ridden (page 22).
Tripmeter 1 and 2	Shows the number of miles (For E type) or kilometers (Except E type) ridden since you last reset the meter (page 23).
Digital clock	Shows hour and minute (page 24).
(8) PGM-FI malfunction indicator lamp (MIL) (amber)	Lights when there is any abnormality in the PGM-FI (Programmed Fuel Injection) system. Should also light for a few seconds and then go off when the ignition switch is turned ON and engine stop switch is at \bigcirc (RUN). If it comes on at any other time, reduce speed and take the motorcycle to your Honda dealer as soon as possible.