

(Ref.No.) Description	Function
(9) Low oil pressure indicator (red)	<p>Lights when the engine oil pressure is below normal operating range. Should light when ignition switch is ON and engine is not running. Should go out when the engine starts, except for occasional flickering at or near idling speed when engine is warm.</p> <p>NOTICE</p> <p>Running the engine with insufficient oil pressure may cause serious engine damage.</p>
(10) Neutral indicator (green)	<p>Lights when the transmission is in neutral. Should also light for a few seconds and then go off when the ignition switch is turned ON.</p>
(11) Odometer/Tripmeter/Digital clock select and reset button	<p>Use this button for the following purpose.</p> <ul style="list-style-type: none"> • To select display mode (page 23) • To reset tripmeter (page 23) • To adjust time (page 24) • To switch blinking of the immobilizer system (HISS) indicator (page 49)