


Adjust by turning the rear brake adjusting nut a half-turn at a time. Make sure the cut-out on the adjusting nut is seated on the brake arm pin (5) after making final freeplay adjustment.


3. Apply the brake several times and check for free wheel rotation after the brake lever is released.

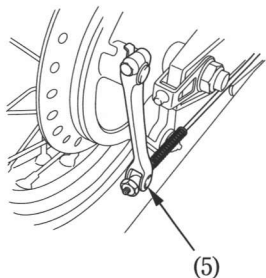

(5) Brake arm pin

If proper adjustment cannot be obtained by this method, see your Honda dealer.

After adjustment, push the brake arm (6) to confirm that there is a gap between the rear brake adjusting nut (4) and the brake arm pin (5).

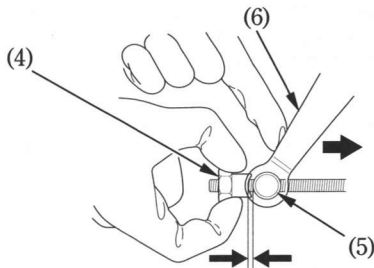

- (4) Rear brake adjusting nut
- (5) Brake arm pin
- (6) Brake arm

After adjustment, confirm the freeplay of the brake pedal.

Other Checks:

Make sure the brake rod, brake arm, spring and fasteners are in good condition.