

## LEFT SIDE COVER


The left side cover must be removed to access the owner's manual, tool kit, colour label and to service the fuses.

### Removal:

1. Loosen the screw (1).
2. Carefully pull the left side cover (2) out until the prongs (3) are clear of the rubber grommets (4).
3. Remove the left side cover.

### Installation:

1. Align the prongs with the rubber grommets.
2. Push the prongs in.
3. Tighten the screw securely.

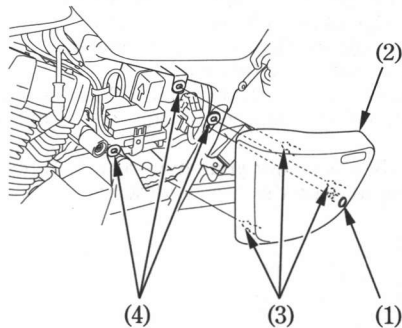

(1) Screw

(2) Left side cover

(3) Prongs

(4) Rubber grommets