


### Fuse Box:

The fuse box (1) is located behind the left side cover.

The specified fuses are:

**20A, 10A**

1. Remove the left side cover (page 56 ).
2. Remove the tool box cap (page 76 ).
3. Remove the fuse box cover (2).
4. Pull out the fuse with the fuse puller furnished in the tool kit (page 76 ). If the fuse is blown, install a new fuse. The spare fuses (3) are located in the fuse box.
5. Install the fuse box cover, tool box cap and left side cover.

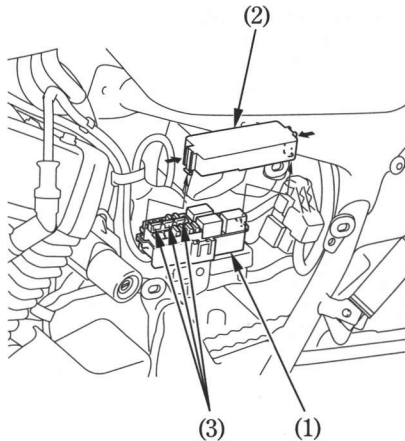

- (1) Fuse box
- (2) Fuse box cover
- (3) Spare fuses