



FUEL TANK MAINTENANCE POSITION

The front of the fuel tank can be tilted up for maintenance.

The fuel tank does not require draining.

To raise:

1. Remove the front seat (page 51).
2. Remove the two bolts (1) and washers (2).
3. Raise the front of the fuel tank (3) and install the bolts to frame body.
4. Use the pin spanner (4) and extension bar (5) provided in the tool kit (page 78).
5. Raise the front of the fuel tank and place the pin spanner and extension bar between the front of the fuel tank and frame body.

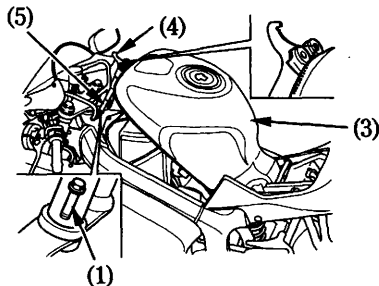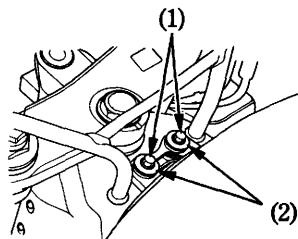

- (1) Bolts
(2) Washers

- (3) Fuel tank
(4) Pin spanner
(5) Extension bar