

## **REMOVAL FROM STORAGE**

- 1. Uncover and clean the motorcycle.  
Change the engine oil if more than 4 months have passed since the start of storage.**
- 2. Charge the battery as required. Install the battery.**
- 3. Drain any excess aerosol rust-inhibiting oil from the fuel tank. Fill the fuel tank with fresh petrol.**
- 4. Perform all Pre-ride Inspection checks (page 60 ).  
Test ride the motorcycle at low speeds in a safe riding area away from traffic.**