

Indicators / Warning lamps

Speed warning lamp (optional)

Illuminates when the speedometer indicates approx 85km/h.

Oil pressure warning lamp

Lights when the oil pressure drops while the engine is running. Should the warning lamp light while the engine is running, stop immediately and check the oil level (ref. P.49). If there is sufficient oil or if the lamp stays after refilling the oil, contact an authorized Honda dealer as soon as possible.




Advice

Riding with the oil pressure warning lamp "ON" could result in damaging the engine.



Tip

In normal operation, the oil pressure warning lamp turns on when the main switch is turned ON, and it turns OFF when the correct oil pressure is reached.

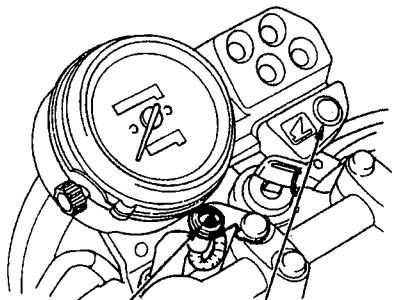

Speed
Warning Lamp

Oil Pressure
Warning
lamp