

Starter Switch

It activates the starter motor to crank the engine while the switch is pushed.



Advice

The starter motor consumes considerable power. Avoid long cranking to prevent flattening the battery.



Tip

- The starter motor cannot be engaged if the engine stop switch is OFF.
- The headlamp turns OFF when the starter motor is engaged.

Horn Switch

The horn sounds by pushing the horn switch when the ignition switch is ON.

