

---

## Passing Lamp Switch

The passing lamp switch is used when overtaking to alert the preceding drivers of your existence/position.

The headlamp alternates between high and low beam while the switch is depressed.

The switch does not work if the dimmer switch is selected to Hi beam.

Passing lamp switch

