


Seat

Removal

Insert the ignition key to the seat lock. Turn the key to the right and lift the rear end of the seat cowl to remove.

Installation

1. Set the projection of the seat to the frame guide to attach the seat.
2. Push the rear end of the seat down to lock it. Pull the seat upward to check it is locked.
3. Pull out the key.

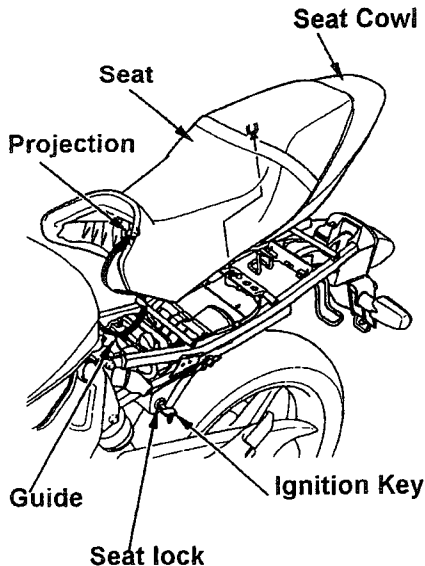

Tip

If you leave the key inside, installing the seat will automatically lock it inside.