
Regular Service

The VTR250 requires the first one month (or 1000km) service and every 6000km thereafter. For optimum safety and comfort, conduct these regular services.

It is your responsibility to have your motorcycle serviced by an authorized Honda dealer.

Contact your Honda dealer to arrange servicing.

If you are checking the motorcycle by yourself, do not carry out work beyond your knowledge and skill, for your own safety.

All repair work should be referred to an Authorized Honda Dealer.

These instructions are based on the assumption that the motorcycle will be used exclusively for its designed purpose.

Sustained high speed operation, or operation in unusually wet or dusty conditions will require more frequent

service than specified in the MAINTENANCE SCHEDULE.

- Consult your authorized Honda dealer for recommendations applicable to your individual needs and use.

Specifications are given on page 80.

Record the results of every service in the service manual maintenance log and store in a safe place.