

**Coolant: Use only genuine Honda Ultra Radiator Fluid**

Dilute the radiator fluid as required using soft mains water.

Recommended concentration:

- 30% (normal condition)  
prevents freezing down to  $-16^{\circ}\text{C}$
- 50% (colder areas)  
prevents freezing down to  $-37^{\circ}\text{C}$

**Adding Coolant to the reservoir**

1. Remove the reservoir.
2. Wipe off the coolant on the coolant level gauge.
3. Hold the motorcycle straight and add coolant to the maximum level.
4. Set the reservoir cap.

