

## Drive Chain

### Chain Slack Check >

Place the motorcycle on the side stand and pull the chain up and down at the mid-point between the front and the rear sprockets. Measure the slack using a ruler.

Drive chain slack: 25 - 35mm


Adjust the slack if out of the range.

Never ride the motorcycle if the slack is 50mm or more.

Roll the motorcycle back and forward to observe the chain.

If the chain is jerky or noisy, have it serviced / replaced.

Contact an Authorized Honda Dealer for the adjustment or the replacement.

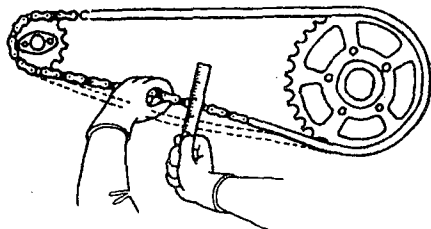

### Drive Chain Slack

(Distance between the arrows)

