

## Rear Brake

### < Brake fluid level check >

Hold the motorcycle upright on the flat surface so that the brake fluid surface becomes level.

Check the fluid level is between minimum and maximum lines.

If the fluid level is below the minimum, brake pads may be worn. Check the pads (p. 61).

If the brake pads are fine, there may be a leak in the brake system.

Contact an Authorized Honda Dealer.

