

Battery Removal / Installation >

Removal

Remove the seat (p. 23).

Unhook the strap.

Disconnect the negative lead from the battery terminal.

Disconnect the positive lead from the battery terminal.

Lift up the battery.

Installation

Connect the positive lead first.

Secure the bolts / nuts.

