

Fuses

< Fuse inspection / replacement >

Turn off the ignition switch before checking the fuses.

Replace blown fuses with the fuses of same rating.

Never use higher-rating fuses. They may cause overheating and electrical system damage.

If a new fuse blows soon after replacement, there may be a fault in the relevant electrical system. Locate and repair the fault before installing a new fuse.




Advice

Replace the electrical parts only with genuine Honda accessories.

Other parts can cause fuses to blow or flatten the battery.

Blown Fuse

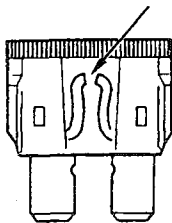

Blown Fuse

