


Fuse Box

- Remove the seat (p. 23).
- Open the fuse box cover.
- Locate the blown fuse from the fuse diagram.
- Replace with one of the spare fuses inside the fuse box.
- Close the fuse box and install the seat.

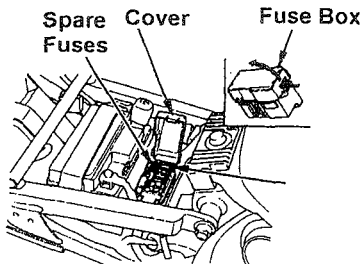

Main fuse

- Remove the seat (p.23).
- Disconnect the starter magnetic switch coupler.
- Pull out and check the main fuse.
- Replace if necessary with the spare fuse located behind the battery box.
- Reconnect the coupler and install the seat.

