


ESSENTIAL INDIVIDUAL COMPONENTS

IGNITION SWITCH


The ignition switch (1) is in front of the left side cover.

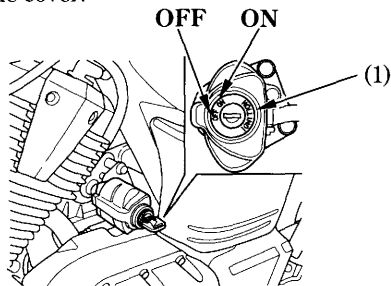

(1) Ignition switch

You should received a key number plate (2) with your key.

You will need this key number if you ever have to replace a lost key. Store this plate in a safe place.

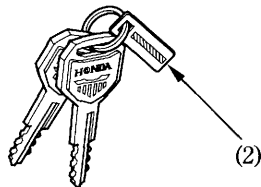

(2) Key number plate

Key Position	Function	Key Removal
OFF	Engine and lights cannot be operated.	Key can be removed
ON	Engine and light can be operated.	Key cannot be removed