

SEAT


The seat must be removed for battery maintenance.

Removal:

1. Remove the two bolts (1) and nut (2).
2. Pull the seat assembly (3) back and up.

Installation:

1. Insert the seat tab (4) into the recess under the frame.
2. Install and tighten the two bolts and nut.

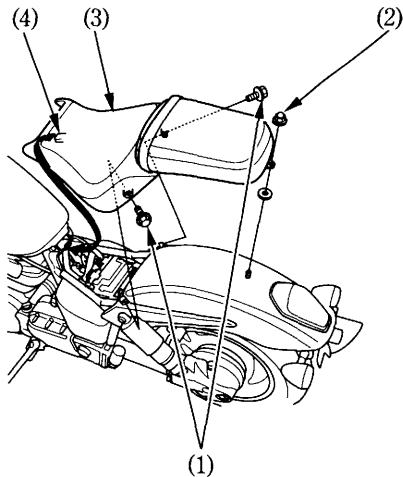

(1) Mounting bolt

(3) Seat

(2) Nut

(4) Tab