	FREQUENCY		WHICHEVER → COMES			ODOMETER READING [NOTE (1)]							
		FI	RST	× 1,000 km	1	6	12	18	24	30	36	Refer	
			į.	× 1,000 mi	0.6	4	8	12	16	20	24	to	
IT	EM		OTE	MONTH		6_	12	18	24	30	36	page	
*	FUEL LINE						I		I		I		
*	THROTTLE OPERATION						I		I		I	71	
	AIR CLEANER	NO	TE (2)					R			R	74	
	SPARK PLUGS						R		R		R	67	
*	VALVE CLEARANCE				I		I		I		I		
	ENGINE OIL				R		R		R		R	62	
	ENGINE OIL FILTER				R		R		R		R_	63	
	RADIATOR COOLANT	NO	TE (3)				I		I		R	20	
*	COOLING SYSTEM						I_		I		I		
*	SECONDARY AIR SUPPLY SYSTEM					L	I		L I		_I_		