




ESSENTIAL INDIVIDUAL COMPONENTS

IGNITION SWITCH

The ignition switch (1) is on the right side below the steering stem.

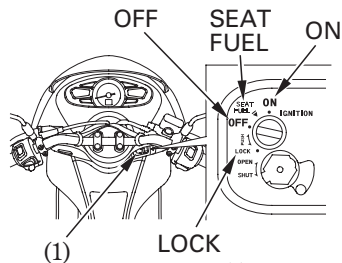

(1) Ignition switch

Key Position	Function	Key Removal
LOCK (Steering lock)	Steering is locked. Engine and lights cannot be operated.	Key can be removed
OFF	Engine and lights cannot be operated.	Key can be removed
SEAT FUEL	Fuel lid and seat opener switch can be operated. Engine and lights cannot be operated.	Key cannot be removed
ON	Engine can be operated. The brakelight, meter light, turn signals and horn can be operated. The headlight operates only when the engine is running.	Key cannot be removed

