



**When the Idling Stop system does not operate properly
(Idling Stop switch is at “IDLING STOP” position)**

When the Idling Stop system does not operate properly, perform the followings.

Symptom	Possible cause	What to do
Engine does not stop by Idling Stop system	Idling Stop switch is at “IDLING”.	Push the Idling Stop switch to “IDLING STOP”.
	Engine is cold.	Warm up the engine.
	Scooter does not stop completely.	Stop the scooter completely. The Idling Stop system operates if the speed is only at 0 km/h (0 mph).
	Throttle is not closed completely.	Close the throttle completely.
	Did not ride the scooter after engine start.	Ride the scooter at speeds of over 10 km/h (6 mph). The Idling Stop system does not operate until you ride at once.

