



Symptom	Possible cause	What to do
Engine does not stop by Idling Stop system	Sitting wrong position.	Ride the scooter in proper riding position. Idling Stop system is designed not to work when no load on the seat.
	Excessive luggage in the center compartment.	Luggage interfere with the seat to close completely. Take out some luggage from the center compartment to close the seat completely.
	PGM-FI malfunction indicator lamp (MIL) lights.	When the PGM-FI malfunction indicator lamp (MIL) lights, the Idling Stop system does not operate for protection of the engine. See your Honda dealer.

