




ENGINE OIL STRAINER SCREEN

Refer to the Safety Precautions on page 87 .

1. Drain the engine oil (page 100).
2. Remove the oil strainer screen cap (1).

3. The spring (2) and oil strainer screen (3) will come out when the oil strainer screen cap is removed.
4. Clean the oil strainer screen.
5. Check that the oil strainer screen, sealing rubber and O-ring (4) are in good condition.

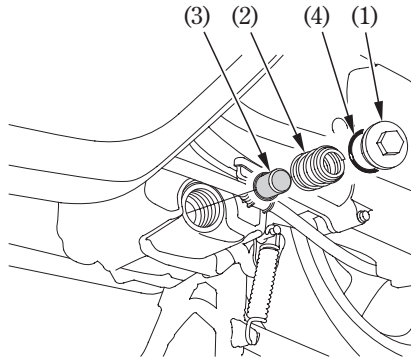

- (1) Oil strainer screen cap
- (2) Spring
- (3) Oil strainer screen
- (4) O-ring

