



FUEL TANK MAINTENANCE POSITION

The rear of the fuel tank can be tilted up for maintenance.

The fuel tank does not require draining.

To raise:

1. Remove the fuel tank mount bolts (1) and fairing mount bolts (2).
2. Raise the rear of the fuel tank (3) slightly and insert the tank bridge bar (4)

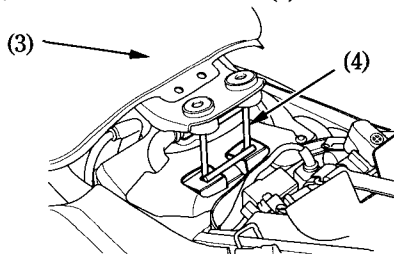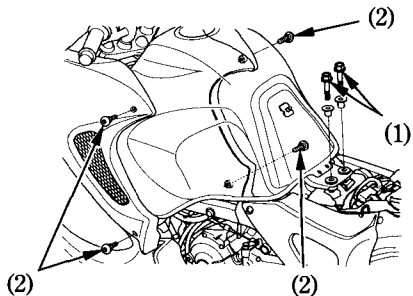

(1) Fuel tank
mount bolts

(2) Fairing mount bolts

(3) Fuel tank

(4) Tank bridge bar