


## Position Light Bulb

1. Pull off the socket (1) from headlight case.
2. Pull out the bulb (2) without turning.
3. Install a new bulb in the reverse order of removal.

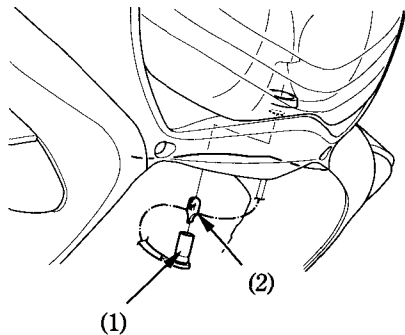

- (1) Socket  
(2) Bulb