


To replace the fuse, turn the fuse holder cap (3) counterclock wise. Pull out the old fuse. New fuse into the fuse holder, and close the fuse holder cap.

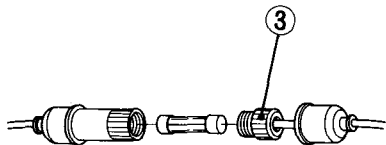

(3) Fuse holder cap