


## WARNING :

Gasoline or low flash point solvents are highly flammable and must not be used to clean the air cleaner elements.

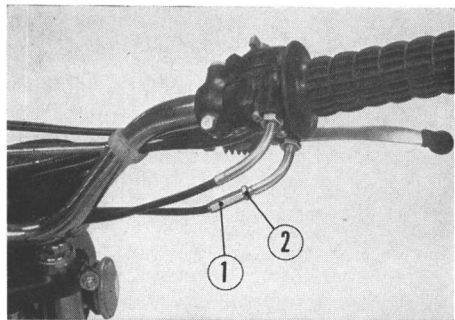

① Grip play upper adjuster    ② Lock nut

## Throttle Cable Adjustment

Two control cables connect the throttle grip to a throttle crank on the carburetor operating bar. One cable opens the throttle valve, while the other cable ensures positive closure. Standard throttle grip free play is approximately 10–15° of grip rotation. This play can be adjusted at the grip play upper adjuster ① and also with the grip play lower adjuster ③.

Major free play adjustments are made with the lower adjuster ③ (such as after replacing a throttle cable or removing the carburetor). Minor free play adjustments are made with the upper adjuster ①. To adjust free play, loosen the lock nut and turn the adjuster. When performing the adjustment, both the opening and closing sides of the adjusters should be adjusted by equal amounts. Tighten the