


SIDE COVER

To remove the left side cover (1), remove the three screws (2) and then pull out the left side cover.


To install the left side cover, fit the part of air cleaner housing cover (3), and tighten three screws.

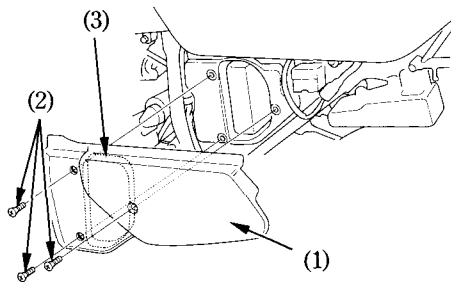

- (1) Left side cover
- (2) Screws
- (3) Part of air cleaner housing cover

To remove the right side cover (4), remove the screw (5), pull out front tab (6) and then pull out rear tab (7).

To install the right side cover, reverse the removal procedure.

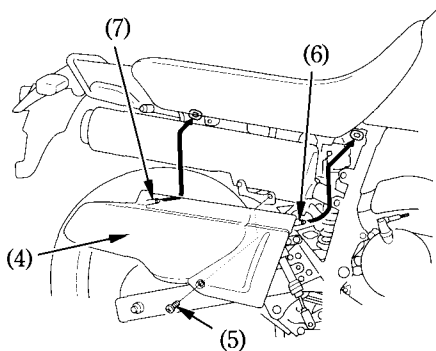

- (4) Right side cover
- (5) Screw
- (6) Front tab
- (7) Rear tab