

### **Flooded Engine**

If the engine fails to start after repeated attempts, it may be flooded with excess fuel. To clear a flooded engine, turn the engine stop switch OFF and push the choke lever forward to Fully OFF (B). Open the throttle fully and crank the engine several times. Wait 10 seconds, then turn the engine stop switch to RUN and follow the Starting Procedure.

### **RUNNING-IN**

During the first 1,000km (600 miles), do not operate the motorcycle at more than 80% of the maximum speed in any gear. Avoid full throttle operation, and do not operate for a long time at one speed.

During initial running-in newly machined surfaces will be in contact with each other and these surfaces will wear in quickly. Running-in maintenance at 1,000km (600 miles) is designed to compensate for this initial minor wear. Timely performance of the running-in maintenance will ensure optimum service life and performance from the engine.