


Front/Rear Turn Signal Bulb

1. Remove the screw (1) and remove the turn signal lens (2).
2. Slightly press the bulb (3) and turn it counterclockwise.
3. Install a new bulb in the reverse order of removal.

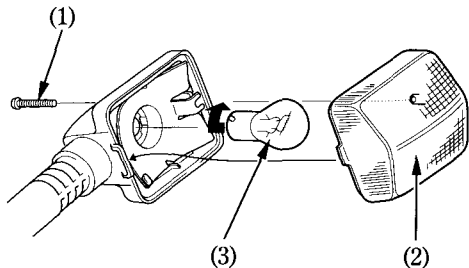

- (1) Screw
- (2) Turn signal lens
- (3) Bulb