


Headlight Beam Adjustment

The headlight must be kept properly adjusted for safe nighttime riding.

Vertical adjustment is made by pivoting the headlight case on its mounting bolts ①.

Horizontal adjustment is made by turning the adjusting screw ② located on the headlight rim.

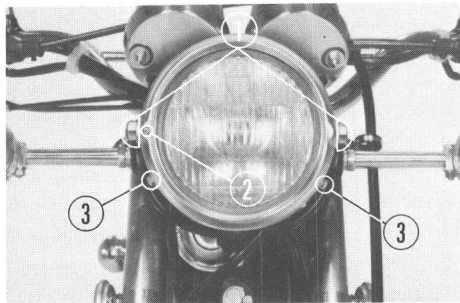


- ① Headlight mounting bolts
- ② Beam Adjusting screw
- ③ Headlight attaching screw

Headlight Replacement

Replace the sealed beam unit as follows:

1. Remove the two headlight attaching screws ③ and remove the headlight from the headlight case.
2. Remove the two retaining lock pins ② and lock screws ③ from the headlight rim.
3. Remove the beam adjusting screw ④.
4. Remove the sealed beam unit.
5. Install new sealed beam unit in the reverse order of removal.

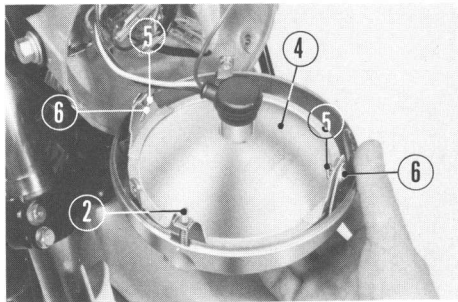

- ④ Sealed beam unit
- ⑤ Cotter pins
- ⑥ Lock screws