


Tail/stoplight Bulb Replacement

1. Remove the two screws retaining the tail/stoplight lens.
2. Press the bulb ① inward **A** and twist to the left **B**, and the bulb can be removed **C**.
3. Replace with a good bulb.
4. When installing the taillight lens, do not over tighten the screw.

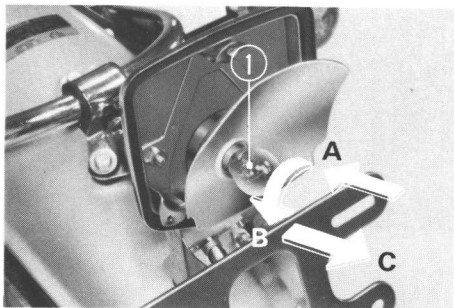

① Tail/stoplight bulb

Turn Signallight Bulb Replacement

The bulb replacement is made in the same manner as for the tail/stoplight bulb in the above paragraph.