

Air Cleaner

6. Inspect for tears or cracks in the foam or seams of the air cleaner. Replace the air cleaner if it is damaged.
7. Allow the air cleaner to **dry thoroughly** before applying oil. A wet air cleaner will not fully absorb the oil.
8. Pour Pro Honda Foam Filter Oil or an equivalent over the entire surface of the air cleaner. Use both hands to evenly spread the oil into the air cleaner. Gently squeeze out any excess oil. (To keep your hands dry, place the air cleaner in a clean plastic bag before spreading the oil into the air cleaner.)
9. Attach the air cleaner to its metal body.
10. Clean the inside of the air cleaner housing.
11. Apply a thin coat of grease to the sealing surface of the air cleaner assembly.
12. Install the air cleaner assembly.
13. Install the air cleaner housing cover.
14. Install the left side cover.